


## Installing the child safety tension device

• Dangling or accessible cords on window coverings can pose an accidental strangulation hazard to infants and young children. It is required that the child safety tension device be installed to remove slack from cords. Install tension device on the window frame to remove all slack on the drawstring cord.

- (see Fig 1) attach to wall/window frame via screw
- (see Fig 2) not attached to the window frame, locks drawstring from continual use

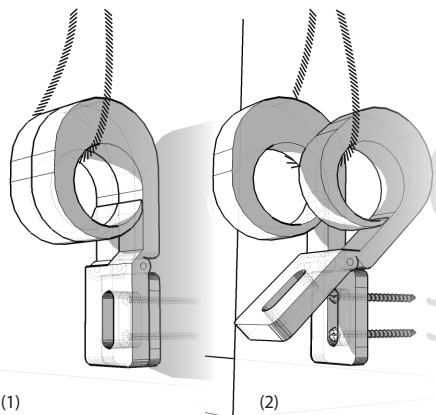

## TROUBLE SHOOTING TIPS

**Slat Tilt:** If your slats are not in a straight horizontal position use the Tilt Cord/Wand to realign them.

**Bracket Door Not Closing:** Keep in mind that the screws for the brackets will not sit flush as there is a bolt head which is raised 2mm. Your new window covering should have a 1/4 - 1/2 inch of play total to allow for expanding and contracting during extreme temperature shifts as well as ease of releasing the window covering from its brackets.

**Valance is Tilting:** To keep the valance from tilting forward check to make sure that the valance clips are secured to the back of the valance, position the clips at least 1/4 the way in from the ends of the valance. If your valance is tilting on one end, ensure that the clip tops are resting on the lip of the headrail.

## ! WARNING

Young children can **STRANGLE** in cord and bead chain loops and in the loop(s) above the cord connector. They can also wrap cords around their necks and **STRANGLE**.



- Always keep cords and bead chains out of children's reach.
- Move cribs, playpens, and other furniture away from cords and bead chains. Children can climb furniture to get to cords.

## CHOKING HAZARD

- Keep cord out of reach from children.
- Remove objects below window.
- Do not tie cords together.
- Make sure safety cords are located 1-2 inches below the head-rail.
- Please reference all warning tags in the instructions and on the blind.
- Please keep cords out of children's reach use one of the devices available at hardware or window covering stores.

## EMERGENCY FIRST AID FOR STRANGULATION



- Remove cord from child's neck
- Call 911 or emergency Center
- Clear throat
- Check breathing and heartbeat
- Begin CPR

## LIMITED LIFETIME WARRANTY

The Manufacturers Collection will be free from defects in materials and workmanship for as long as the original purchaser owns the product, provided that the product was installed properly. The limited lifetime warranty is extended to the original purchaser only, in the original window for which it was intended.

The warranty does not include any condition or damage resulting from accidents, alterations, misuse, failure to install properly, or others instances outside of Manufacturers control. This warranty also does not apply to conditions resulting from normal wear and tear.

To obtain service, contact the dealer from whom you purchased the product. Manufacturer will repair or replace defective parts or components at no charge.

This warranty is exclusive and in lieu of all other obligations, liabilities or warranties. In no event shall Manufacturers be liable for incidental or consequential damages, or for any other damage, loss or expense, cost or fees associated with such damage. In some states, exclusion for incidental or consequential damages are not allowable.

This warranty does not cover any transport, removal, or re-installation charges which may occur as a result of defects in materials or workmanship.

This warranty gives you specific legal rights, and may also have other rights, which vary from state to state.

## CARE & CLEANING

The soft, delicate feel of the fabric belies the durability of the material. It is made from a sturdy, knitted polyester fabric which can be feather dusted or vacuumed on a low setting. Spots or stains can be lightly rubbed clean with a damp sponge and mild soap. To avoid discoloration of the material, we recommend against the use of chemical cleaners. The sheer fabric may also be ultrasonically cleaned.

## IMPORTANT SAFETY WARNING

Window cords can pose a potential strangulation hazard to young children. According to the U.S. Consumer Product Safety Commission, corded window coverings are among the top five hidden hazards in American homes. Check your window coverings for exposed or dangling cords and retrofit or replace them with today's safer products.

Never place a crib, playpen, bed or any type of low-standing furniture near a window. In exploring their surroundings, young children can accidentally fall through an open window or window screen, or become tragically entangled in a nearby window cord. Whenever possible, place cribs and furniture on a non-windowed wall.

Dangling or accessible cords on window coverings can pose an accidental strangulation hazard to infants and young children. For your safety, replace older corded window coverings with today's safer products.


The Window Covering Safety Council (WCSC) and government safety officials recommend that you only use cordless window products in homes with young children.

## ! WARNING

Young children can **STRANGLE** in cord and bead chain loops and in the loop(s) above the cord connector. They can also wrap cords around their necks and **STRANGLE**.



- Always keep cords and bead chains out of children's reach.
- Move cribs, playpens, and other furniture away from cords and bead chains. Children can climb furniture to get to cords.

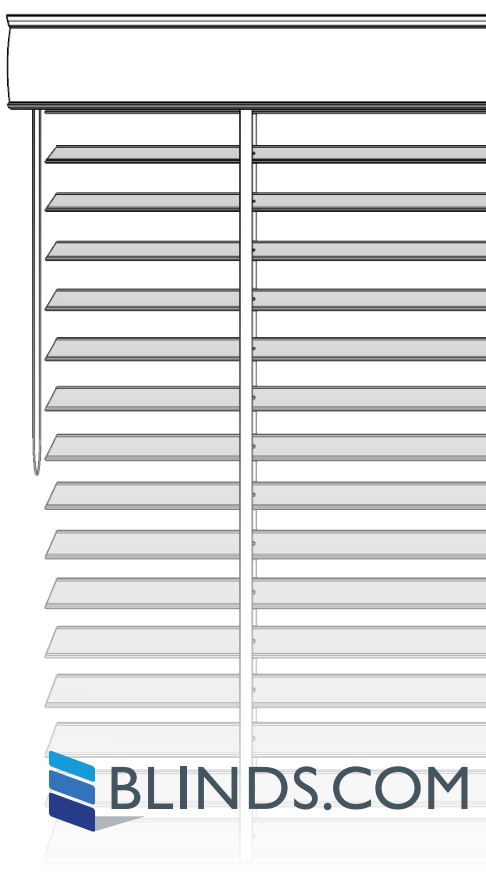

Thank you for choosing our Fabric Horizontal Blind for your Home.

We are confident that you will find these window shades to be of superior quality and value, compared to other shades on the market today.

In this guide, you will find useful information about installation, child safety, cleaning and warranty when using our shades.

READ ALL INSTALLATION INSTRUCTIONS BEFORE INSTALLATION

## Contacting Us

To contact Blinds.com regarding any question or concerns about your blind, you may reach us at:

1.800.505.1905

customerservice@blinds.com

**SUGGESTED TOOLS** (not included)**BEFORE YOU BEGIN YOUR INSTALLATION**


Your new 2" x 2.5" Fabric Blind is custom made to your specifications from the finest fabric available. The installation should be easy and your blind will look elegant.

**Mounting Options**

- Inside mount: Blind is mounted inside the window frame, either to the top of the frame or to the sides.
- Outside mount: Blind is mounted either on or outside the window frame.
- Note: Mounting screws provided are suitable for most mounting surfaces. See below for additional suggestions.
- For wallboard or plaster: Use hollow wall anchors for added support.
- For concrete, stone, brick or tile: Use an appropriate drill and appropriate anchors before fastening the screws.
- For metal surfaces: Pre-drill holes and use appropriate anchors before fastening the screws.

**PARTS****High Profile Brackets**



Quantity: 1 pair per blind

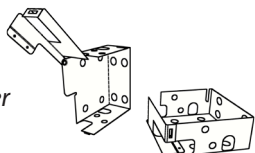**Screws**


Quantity: 8 per packet

**Valance Clips**

 Quantity: 2 or more depending on width of blind

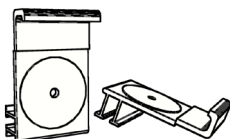**OPTIONAL PARTS****Hold Down Brackets**

To hold the bottom rail of the blind in place i.e. for a door window

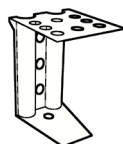**Center Support Bracket**


Use with box brackets for blinds wider than 42.5"

**1 MOUNTING BRACKETS**


- Using 4 screws per box bracket, fasten the brackets to the mounting surface. Always use 4 screws. Leave brackets in open position.

**Using Box Brackets**

- **Inside mount:** Mount brackets in the corners of the frame.

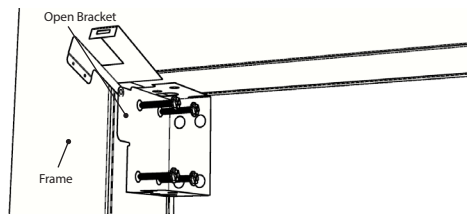

- **Outside Mount:** Outside edge of the brackets should be positioned 1/8" to the outside of the headrails end mark. Mark position of the bracket as illustrated.

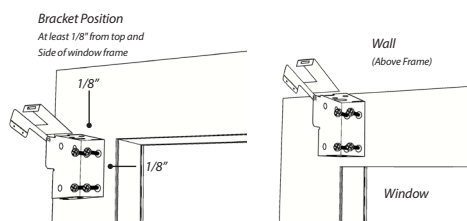
**2 MOUNTING CENTER SUPPORT BRACKETS**

(Only for blinds over 42.5" wide)


- When only one center support bracket is provided, position the center bracket in the of the

two mounting brackets. The center bracket must be 2" to 3" to the right or left of center to make sure it does not interfere with mechanical components of the blind. (If more than one center bracket is provided, they should be spaced evenly between the two mounting brackets.)


- Using 4 screws per bracket, fasten the bracket(s) to your window frame or wall. For inside mount, use the top 2 holes or 4 side holes. For outside mount, use the back 4 holes.

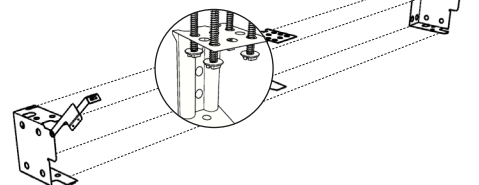**3 INSTALLING THE BLIND INTO THE BRACKETS**

- Brackets should be installed with 4 screws and the secure latch doors open.
- Slide headrail into the brackets and close doors to secure blind.

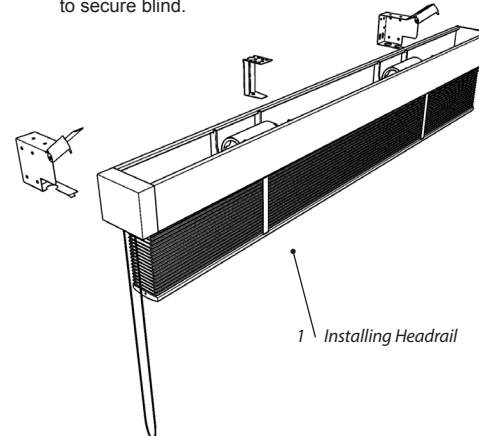



- 2 Close Bracket Doors

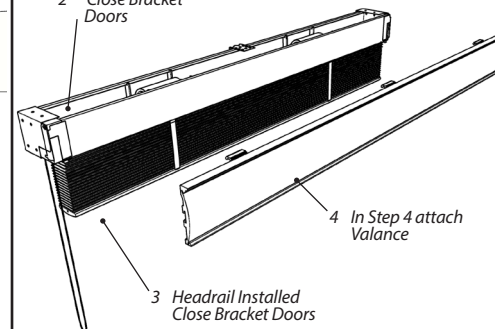

4

**ATTACH THE VALANCE**

- Clip the Magnetic Valance Clips to the Valance and let the magnets snap to the steel headrail.

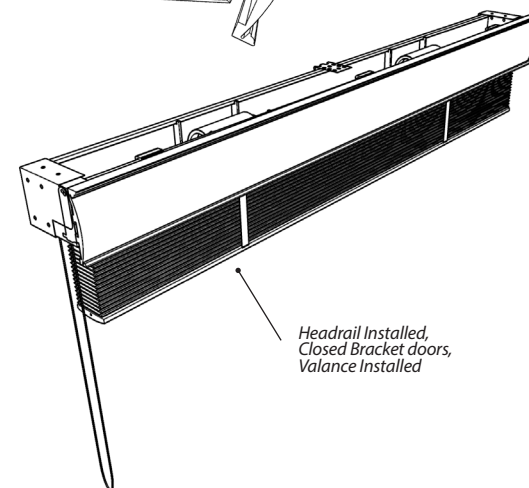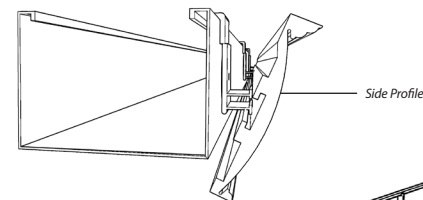


5

**INSTALLING HOLD DOWN BRACKETS**

(only if you have ordered hold down brackets)

- Lower the blind to the desired height.
- Position the hold down bracket to align the tab.
- Mount the bracket using the two screws provided (see Fig 1). Insert the tab into the pre-drilled hole. To raise or lower the blind, release the bottom rail from the brackets by pulling the brackets away from the bottom rail.

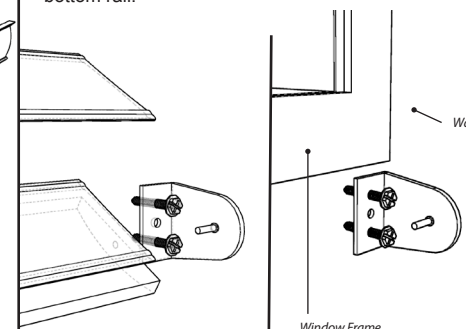



## INSTRUCTION MANUAL



*Motorized  
Wand*



*Single Channel  
Remote*



*Multi-Channel  
Remote*

## TABLE OF CONTENTS

### Getting Started

NOTE: Your product will come ready to be installed and used without any programming needed. Use the instructions in this guide if there are any issues with your product.

### Operating the Remote

- Motorized Wand Instruction Guide ----- 3
- Single Channel Instruction Guide ----- 4
- Multi-Channel Instruction Guide ----- 6

### Questions?

Contact your Retail Dealer regarding any questions you may have about your E-SERIES product.

PLEASE KEEP THIS FOR FUTURE REFERENCE / TROUBLESHOOTING






## WELCOME TO YOUR E-SERIES PRODUCT WE HOPE YOU ENJOY THE EASE AND FUNCTIONALITY OF YOUR PRODUCT


### E-SERIES MOTOR NOTE:

The E-SERIES Motor can be found on the headrail of your E-Series Product. If your product will not charge or function properly, remove the product from the window and make sure that all connections to the battery, motor, and wand are connected. (Horizontal Fabric E-Series only. Sheerview E-Series is an all-in-one motor/battery)

### HORIZONTAL BLIND:

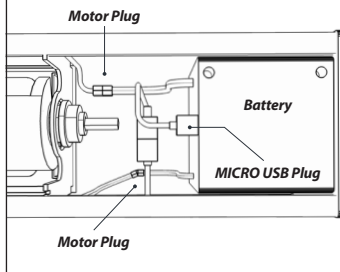

### SHADE:

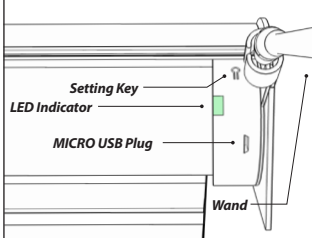

**NOTE:** Picture depicts underside of the shades headrail

## WAKE YOUR E-SERIES PRODUCT

Press, UP or DOWN or STOP to wake your product in preparation to setting changes.

### SETTING KEY NOTE:

The **Setting Key** can be found on the **Motor of the headrail** of your E-Series Product (green circular button) and on the back of the Motorized Wand (white pinhead button). A paper clip can be used to troubleshoot the function of the product.

- (pg. 3 Wand Instructions)
- (pg. 4 Single Channel Remote Instructions)
- (pg. 6 Multi-Channel Remote Instructions)

If your **Motorized Wand** is attached, there is a small pinhole **Setting Key** on the back just above the Micro USB port. Use this in-place of the Setting Key in the headrail, as this may be difficult to reach.



Setting Key  
Headrail



Setting Key  
Headrail



Wand  
Setting Key

## QUESTIONS?

Contact your Retail Dealer regarding any questions you may have about your E-SERIES product.

*Motorized  
Wand*

PAGE 3

*Single Channel  
Remote*

PAGE 4

*Multi-Channel  
Remote*

PAGE 6





UP

STOP  
TILT

DOWN

SETTING  
KEY

USB  
CHARGING  
PORT

*Motorized  
Wand*

#### COMPLETE RESET OF THE E-SERIES PRODUCT:

- Press & Hold the **SETTING KEY** until the product jolts 4 times a 3 second pause will happen in between jolts, then release. You will hear 4 beeps after you release the Setting Key.

#### TECHNICAL SPECIFICATIONS

- Rated Voltage: 12v
- Micro USB
  - Charge port on back of wand
- SETTING Key

## PROGRAMMING BUTTONS

### 1 SETTING THE TOP & BOTTOM POSITION:

#### SET TOP POSITION

- Lower the bottom-rail 5" from the top, then Press & Hold **UP+STOP** (2 jolts & 1 beep) then release the buttons.
- The motor will be in jog mode, press **UP** or **DOWN** to select your preferred top position of your product.
- Press the **STOP** Button to set this position. You have successfully set the top position.

#### SET BOTTOM POSITION

- Go to the desired bottom position, then Press & Hold **DOWN+STOP** (2 jolts & 1 beep) then release the buttons.
- The motor will be in jog mode, press **DOWN** or **UP** to select your preferred bottom position of your product.
- Press the **STOP** button to set this position. You have successfully set the bottom position.

### 2 CORRECT THE TOP & BOTTOM POSITION:

#### CORRECT TOP POSITION

- Press & Hold **UP+STOP** (1 jolt & 1 beep) then press the **UP** and **DOWN** button to the new desired top position.
- Press & Hold **UP+STOP** (1 jolt & 1 beep) to set this position. You have successfully set the corrected the top position.

#### CORRECT BOTTOM POSITION

- Press & Hold **DOWN+STOP** (1 jolt & 1 beep) then press the **DOWN** and **UP** button to the new desired bottom position.
- Press & Hold **DOWN+STOP** (1 jolt & 1 beep) to set this position. You have successfully set the corrected the bottom position.

### 3 SWITCH BETWEEN CONTINUOUS MODE & JOG MODE:

- Press & Hold **UP+DOWN** (1 jolt & 3 beeps), the motor has switched to Jog Mode from Continuous Mode (*comes pre-programmed on all E-Series Products*)
- Repeat the previous step if you want to switch back to Continuous Mode.

### 4 REVERSE CONTROL DIRECTION:

- Press & Hold the **Setting Key** on the Wand/Motor (3 jolts) 3 second pause in between each jolt, then release the button. you will hear 3 beeps
- You have reversed the directions of the **UP** and **DOWN** buttons.



UP

STOP  
TILT


DOWN

BLUE  
INDICATION  
LIGHT

*Single Channel  
Remote*

Inside the Back of the Remote

P2

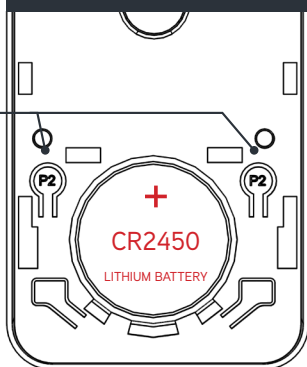

## TECHNICAL SPECIFICATIONS

- Transmitting Frequency: 433.925MHZ
- Operating Temperature
  - 5°C - 50°C / 41°F - 122°F
- Transmission Distance:
  - Outside: 200 meters / 656 feet
  - Inside: (between 2 walls) 35 meters / 114 feet
- Remote Model Number: DD2700H

## PROGRAMMING BUTTONS

### 1 PAIR A REMOTE:

- Press & Hold the **SETTING KEY** (pg. 1 *Setting Key Note*) on the back of the Wand/Motor (1 jolts & 1 long beep), release the Setting Key, then press **UP** on the remote to pair.
- You will have successfully paired the remote when you receive feedback of (2 jolts & 3 beeps).

**NOTE:** The Single Channel Remote can control up to 20 E-SERIES products at one time. See "Pair A Remote" for instructions.

### 2 DELETE A REMOTE:

- Press & Hold the **SETTING KEY** (pg. 1 *Setting Key Note*) on the back of the Wand/Motor (1 jolts & 1 long beep), release the Setting Key, then press **DOWN** on the remote to delete.
- You will have successfully deleted the remote when you receive feedback of (2 jolts & 5 beeps).

### 3 ADJUST THE SPEED OF YOUR PRODUCT:

There are three speed levels (3-high, 2-medium, 1-slow) your product will come set at speed level 3-high.

- Slow down the product speed, Press P2 then **DOWN** 2 times (you will hear the drop in motor speed at each level 2-medium, 1-low).
- Speed up the product speed, Press **P2** then **UP** 2 times (you will hear the rise in motor speed at each level 2-medium, 3-low).
- You will have successfully slowed down or speed up your product when you receive (2 jolts and 1 beep).

### 4 SETTING THE TOP & BOTTOM POSITION:

#### SET TOP POSITION

- Go to the desired top position, then Press & Hold **UP+STOP** (4 jolts & 1 beep) then release the buttons.
- The motor will be in jog mode, press **UP** or **DOWN** to select your preferred top position of your product.
- Press the **STOP** Button to set this position. You have successfully set the top position.

#### SET BOTTOM POSITION

- Go to the desired bottom position, then Press & Hold **DOWN+STOP** (4 jolts & 1 beep) then release the buttons.

Next Page -

- Correct the Top & Bottom Position
- Switch between Continuous Mode & Jog mode
- Reverse control direction
- Complete reset of the E-SERIES Product





- The motor will be in jog mode, press **DOWN** or **UP** to select your preferred bottom position of your product.
- Press the **STOP** Button to set this position. You have successfully set the bottom position.

## 5 CORRECT THE TOP & BOTTOM POSITION:

### CORRECT TOP POSITION

- Press & Hold **UP+STOP** (2 jolts & 1 beep) then press the **UP** and **DOWN** button to the new desired top position.
- Press & Hold **UP+STOP** (2 jolts & 1 beep) to set this position. You have successfully set the corrected the top position.

### CORRECT BOTTOM POSITION

- Press & Hold **DOWN+STOP** (2 jolts & 1 beep) press the **DOWN** and **UP** button to the new desired bottom position.
- Press & Hold **DOWN+STOP** (2 jolts & 1 beep) to set this position. You have successfully set the corrected the bottom position.

## 6 SWITCH BETWEEN CONTINUOUS MODE & JOG MODE:

- Press & Hold **UP+DOWN** (1 jolts & 3 beeps) the motor has switched to Jog Mode from Continuous Mode (*comes pre-programmed on all E-Series Products*)
- Repeat the previous step, if you want to switch back to Continuous Mode.

## 7 REVERSE CONTROL DIRECTION:

- Press & Hold the **SETTING KEY** on the Wand/Motor (2 jolts & 2 beeps) ) then release the button.
- You will have reversed the directions of the UP and DOWN buttons.

SEE Motorized Wand (pg.3)

- Complete reset of the E-SERIES Product (pg.3)



UP

STOP

TILT

DOWN


UP CHANNEL CYCLE

DOWN CHANNEL CYCLE

## Multi-Channel Remote

Inside the back of the remote

P2

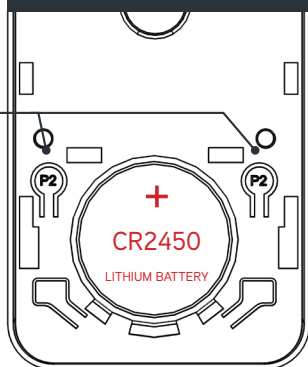

### TECHNICAL SPECIFICATIONS

- Transmitting Frequency: 433.925MHZ
- Operating Temperature
  - 5°C - 50°C / 41°F - 122°F
- Transmission Distance:
  - Outside: 200 meters / 656 feet
  - Inside: (between 2 walls) 35 meters / 114 feet
- Remote Model Number: DD2702H

## PROGRAMMING BUTTONS

### 1 PAIR A REMOTE:

- Select the channel you want to pair by pressing **LEFT <** or **> RIGHT**.
- Press & Hold the **Setting Key** (pg. 1 Setting Key Note) on the back/top of the Wand/Motor (1 jolt, release the Setting Key, you will hear 1 long beep), then press **P2** once, you will hear a beep, then press **UP** on the remote to pair.
- You will have successfully paired your Multi Channel Remote when you receive 1 jolt and 1 beep.

### 2 ADD ANOTHER CHANNEL FOR A NEW E-SERIES PRODUCT:

- Press the **LEFT <** and **> RIGHT** buttons at the same time, the LCD will show a C, and then turn into 15. DO NOT let go of the buttons until you see the 15.
- Change the channel by pressing **<** or **>** press **STOP** at the desired number of channels you need.

**NOTE:** Channel "0" controls all Products on the Multi-Channel Remote.

**NOTE:** The Multi-Channel Remote can support up to 20 products per channel and up-to 15 channels per remote.

### 3 DELETE A REMOTE:

- Press & Hold the **Setting Key** (pg. 1 Setting Key Note) on the back of the Wand/Motor (1 jolt & 1 long beep), release the Setting Key, then press **DOWN** on the remote to delete.
- You will have successfully deleted the remote when you receive feedback of (1 jolt & 5 short beeps)

### 4 ADJUST THE SPEED OF YOUR PRODUCT:

- There are three speed levels (3-high, 2-medium, 1-slow) your product come set at speed level 3-high.
- Slow down the product speed, Press **P2** then **DOWN** 2 times pause for 1 second in between DOWN presses (you will hear the drop in motor speed at each level 2-medium, 1-low).
  - Speed up the product speed, Press **P2** then **UP** 2 times pause for 1 second in between UP presses (you will hear the rise in motor speed at each level 2-medium, 3-low).
  - You will have successfully slowed down or speed up your product when you receive (2 jolts and 1 beep)

SEE Motorized Wand (pg.3) /Single Channel Remote (pg.4-5)

- Set the Top & Bottom Position (pg.3 / pg.4)
- Correct the Top & Bottom Position (pg.3 / pg.4)
- Switch between Continuous Mode & Jog mode (pg.3 / pg.5)
- Reverse control direction (pg.3 / pg.5)
- Complete reset of the E-SERIES Product (pg.3)





## INSTRUCTION MANUAL

WE HOPE YOU HAVE FOUND THIS INSTRUCTION GUIDE HELPFUL.

## QUESTIONS?

Contact your Retail Dealer regarding any questions you may have about your E-SERIES product.



**WARNING:** THE E-SERIES PRODUCT CAN EXPOSE YOU TO CHEMICALS INCLUDING CARBON BLACK (CAS NO. 1333-86-4) WHICH IS KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER. FOR MORE INFORMATION GO TO [WWW.P65WARNINGS.CA.GOV](http://WWW.P65WARNINGS.CA.GOV)

DY.MES.W.1.15.18\_LWF

