
ONE YEAR LIMITED WARRANTY:

What is covered by this warranty and for how long:

All products are warranted against defects in materials and workmanship for a period of one (1) year from the date of purchase, provided that the product is installed according to the product instructions. We reserve the right to determine if your piece warrants repair or partial replacement of any parts. In the unlikely event that the entire piece is defective, we will replace this window covering with a new window covering of equal or superior value; this shall be your sole remedy under this warranty.

Who and what is covered by this warranty:

The original customer in a residential application within the United States is covered under this warranty; proof of purchase is required. Removal, installation or re-installation of any window covering is not covered under this warranty. This warranty does not cover damage or defects caused by or resulting from improper maintenance, neglect or improper use, abuse, misuse, neglect, accidents, acts of god, alteration, commercial use, installation, removal or re-installation or exposure to excessive moisture.

Your rights under State Law:

This warranty gives you the specific legal rights. You may also have other rights, which may vary from state to state. We will not be liable for **INCIDENTAL OR CONSEQUENTIAL DAMAGES** or for any other direct or indirect damage, loss, cost, expense or fee. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you

THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER OBLIGATIONS, LIABILITIES, OR WARRANTIES.

WARNING:

Young children can strangle in cord and bead chain loops. They can also wrap cords around their necks and strangle.

- Always keep cords and bead chains out of children's reach.
- Move cribs, playpens and other furniture away from cords and bead chains as children can climb furniture to get to cords.
- Attach a cord tension device or cord guide to the wall. This can prevent children from pulling cords and bead chains around their necks.



INSTALLATION INSTRUCTIONS

FLAT SHEER SHADE

Thank you for purchasing your flat sheer shades. With proper installation your shades should look beautiful and provide years of service. Please check for all parts and read these instructions before starting installation.

NOTE: These instructions cover installation of the flat sheer shade within a cassette system. Your flat sheer shade will arrive already pre-installed in the cassette, so all you need to do is install the cassette to the mounting surface and install the cord/chain tensioner.

All nylon cord and bead chain loops should be secured with tensioners to prevent the risk of strangulation. Keep cord/chain loops away from children and pets.

MOUNTING HARDWARE KIT INCLUDES:



Universal Cassette Brackets & Screws
For Inside (top) and Outside (face)
mounting



Cord/Chain Tensioner & Screws
Shown with both color-coordinated
nylon cord and beaded chain

TOOLS THAT MAY BE REQUIRED:

Pencil, Tape Measure, Drill, Screw Driver, Level and Step Stool

INSTALLING YOUR SHADE:

NOTE: For wallboard or plaster, use anchors designed for hollow walls (not included). For concrete, stone and brick, use a masonry drill bit and anchors designed for masonry (not included).

STEP 1: INSTALL BRACKETS

1. Your cassette shade will have been packaged with universal cassette mounting brackets. These brackets are used for both inside (top) mount or outside (face) mounting. **[Figure 1 & 2]**
2. Mark the desired position of the brackets with a pencil. Position one bracket about two inches in from each end of the cassette and then space out any middle brackets equally (if supplied).
3. Install brackets and make sure they are level and in line with each other. If they are not level, the cassette may not snap properly into all of the brackets.



Figure 1 – top mount



Figure 2 – face mount



Figure 3 – cassette top



Figure 4 – cassette back

STEP 2: INSTALL SHADE

Tilt the front of the shade up, and hook the front lip of the bracket over the middle rib on the top of the cassette. **[Figure 3]**

Then push the back of the cassette up and into the back of the bracket until it snaps over the rib on the bottom of the cassette.

[Figure 4]

STEP 3: INSTALL THE CHAIN TENSIONER

Shades with clutch controls come with a continuous cord/chain loop, which should always be screwed to the wall with the included cord/chain tensioner.

1. The chain tensioner should be installed to a flat surface, so the cord or chain is taut, but not stretched. Be sure not to twist or cross the cord/chain. **[Figure 4]**
On inside mount shades, the tensioner may be attached to the windowsill or to the inside of the window frame. For outside mount or wall mount shades, the bracket may be mounted to the exterior of the window frame or the wall.
2. With a pencil, mark the desired location of the screw holes for the tensioner and then drill pilot holes. Then install the tensioner with the screws, making sure that the tensioner is fully installed, so that the spring is pushed in and the chain passes smoothly through the guide.



Figure 4 – tensioner

The cord/chain tensioner forms an important safety function by keeping chain loops away from small children. Never operate this shade without a functioning and correctly installed cord/chain tensioner.

OPERATING YOUR SHADE

Pull on the front of the cord/chain loop to raise the shade, and the back of the cord/chain loop to lower it.

Correcting an Overwound Shade:

If you pull on the loop back until the shade lowers completely and then begins to raise, you've overwound it. Now the front layer of fabric is winding around the front of the roller tube, and the two fabric layers are far apart.

To correct this, just pull on the loop front until the shade lowers completely and then begins to raise. You'll see that the two layers of fabric are now close together and the fabric is winding properly around the tube back.