



Vertical Sheer Installation Instructions

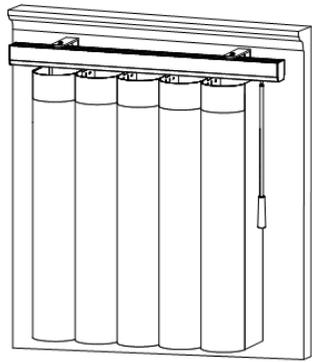

Vertical Sheer

Required Tools

- Drill
- Measuring Tape
- Screwdriver
- Level
- Pencil

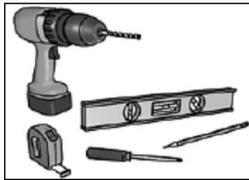


Components

Name	Drawing	Notes
L Bracket		To install the headrail.
C Clip		
Nut		
Bolt		
#8x1 1/4" Screw	 For installing L bracket	Screws for orders without plastic spacers
#8x2" Screw	 For installing L bracket	Screws for orders with plastic spacers
Plastic Spacer		Optional

Installation

- See below position chart for "X".


Outside Mount	
$R \leq 40"$	$X=4"$
$40" < R \leq 65"$	$X=10"$
$R > 65"$	$X=15"$

 


Outside Mount

- Tighten the nut and bolt after the C clip has been adjusted to the needed position on the L bracket.

 
Adjust to the needed position then tighten the nut
- Make sure that the distance from the top of the bracket to the edge of the window frame is at least 3" (see diagram below).



- Place brackets into position and mark where the screws will go. Secure the brackets into position using the hex head screws provided. If more brackets have been supplied, space them evenly between the first two brackets. We recommend using a level to align brackets.
- Position the top front lip of the headrail into the C clip front lip, then push the headrail up at the back to click it into place as per step 2 in diagram below.


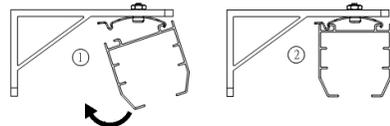


For side by side shades, add a C clip where the two headrails meet.

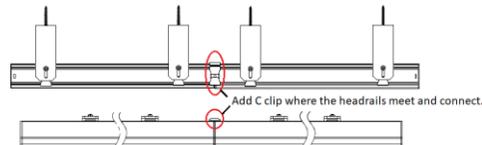

Fabric


 
- **Assemble the fabric vanes**
 - Unroll the fabric. Take the fabric vanes one by one from the top of the unrolled fabric. If there are two rolls, start with roll A.
 - The first top vane of the unrolled fabric goes to the left end.
 - Fasten the fabric vanes to one another by clasping the male and female clips together, as per step 1 in the diagram below. Then push the clips up to the carriers, as per steps 2 & 3 in the diagram.

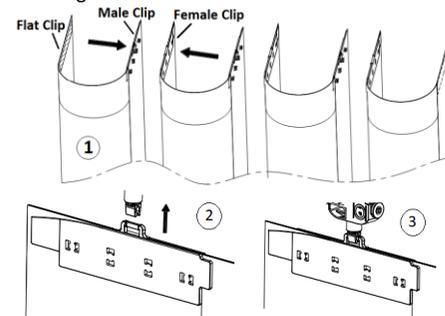

- Assemble the fabric vanes from the left to right. Repeat the steps in the diagram above to finish the installation.


Removal

  - **Remove the fabric vanes**
Pull down the fabric clips from the carriers; then detach the male and female clips holding the vanes together.
- **Remove the headrail – Outside Mount**
Insert flat screwdriver between the C clip and the headrail at the back. Tilt screwdriver forward until headrail loosens. Remove headrail from clip.




Operation Instructions


- To operate, just rotate the wand to let in the light or to keep privacy.

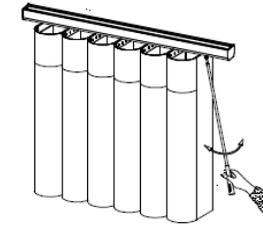


- Make sure the fabric vanes are in open position when stacking the shade open or closed.

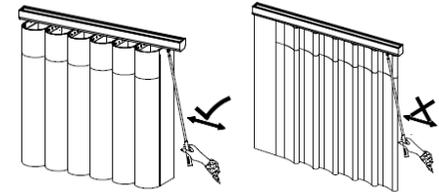

- Please note that the fabrics cannot close entirely when some vanes are stacked.

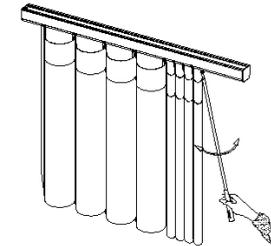

- If the fabric vanes don't move simultaneously when rotating the wand, please keep rotating the wand to one end until you hear the "click-click" sound and then rotate the opposite direction to another end until you hear the click sound again. See if it's back to normal. If not, please repeat the above steps a few times.

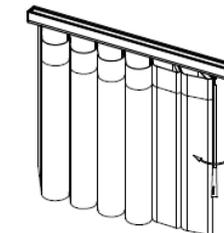

Maintenance

- Hand wash
 1. Remove fabric vanes from the carrier. (Do not detach the fabric clips from the fabric vanes)
 2. Fold the fabric vane carefully and put it in a container filled with water and laundry detergent.
 3. Soak the fabric vane in water with laundry detergent for about 30 minutes and then rub the stain gently.
 4. Soak the fabric in clean water for about 5 minutes and then clean out all the soap.
 5. Shake out the fabric vane and then let stand until it stops dripping water. (Please be careful not to crease or wrinkle the fabric during this time).
 6. Hang the fabric vanes back and keep them in open position (keep them in U shape). Leave them open to dry naturally.
 7. If it's wrinkled after the fabrics are dry, steam it to eliminate the wrinkles. It's recommended that you save the paper tube that came with the fabric roll and place it behind the fabric vane for support while steaming. Fabric vane can be steamed on "Nylon" setting (around 200-220°F).
- Machine wash
 1. Remove fabric vanes from the carrier. (Do not detach the fabric clips from the fabric vanes)
 2. Roll each fabric vane from bottom to the top and then put one roll of fabric in each laundry bag.
 3. Set to soft/ gentle mode for wash machine. Use cold water with laundry detergent. Do not spin.
 4. Take out the fabric roll from the laundry bag. Shake out the fabric vane and then let stand until it stops dripping water. (Please be careful not to crease or wrinkle the fabric during this time).
 5. Hang the fabric vanes back and keep them in open position (keep them in U shape). Leave them open to dry naturally.
 6. If it's wrinkled after the fabrics are dry, steam it to eliminate the wrinkles. It's recommended that you save the paper tube that came with the fabric roll and place it behind the fabric vane for support while steaming. Fabric vane can be steamed on "Nylon" setting (around 200-220°F).