



Size Considerations

Continuous-Loop Lift, Motorized Lift, and Dual Shade: Mounting Depth Illustrations


The following diagrams illustrate the mounting depth requirements for shades mounted inside window casements.

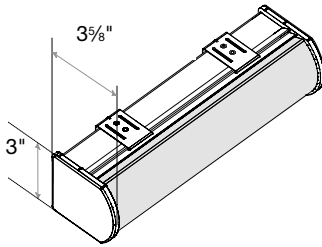


Small Cassette Valance
1 3/8" Minimum Inside Mount

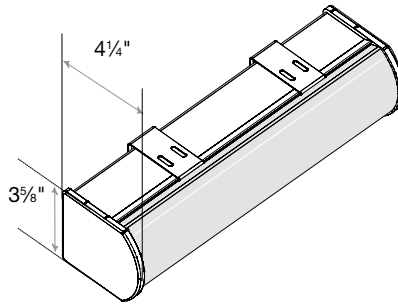


Medium Cassette Valance
1 3/4" Minimum Inside Mount

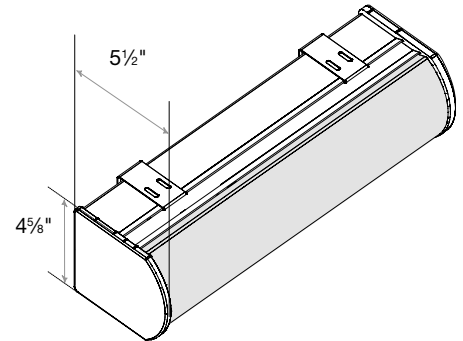


Large/Dual Cassette Valance
1 3/4" Minimum Inside Mount

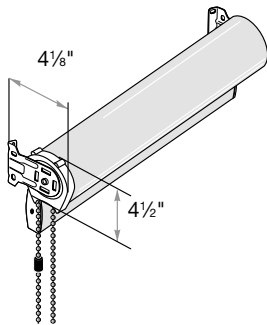


No Valance*
3/4" Minimum Inside/Side Mount

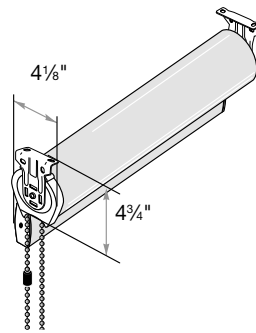


No Valance*
4 1/8" Minimum Inside/Top Mount

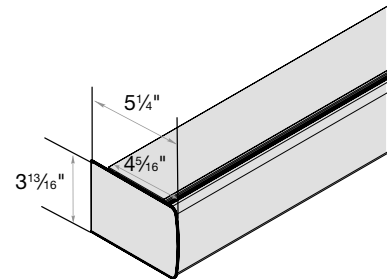


Contour Valance
3 1/2" Minimum Inside Mount
(return can be trimmed)

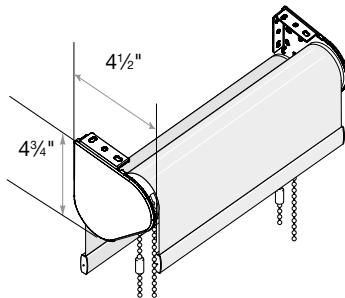


Dual Shade—No Cassette Valance
2" Minimum Inside/Top Mount
3/4" Minimum Inside/Side Mount

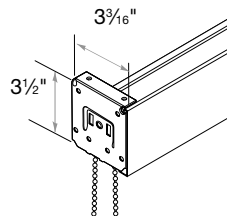

3" Fascia
2 3/4" Minimum Inside/Top Mount
3/4" Minimum Inside/Side Mount

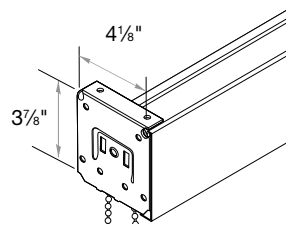


4" Fascia
3 3/4" Minimum Inside/Top Mount
1 1/2" Minimum Inside/Side Mount

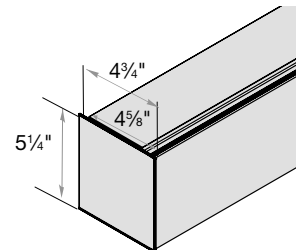


Flat Valance
2 15/16" Minimum Inside Mount
(return can be trimmed)


Cordless Lift and Smart Pull Lift: Mounting Depth Illustrations

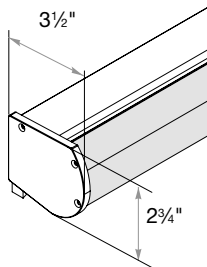


Small Cassette Valance
1 1/2" Minimum
Inside Mount

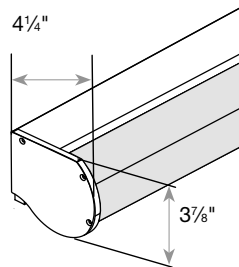


Medium Cassette
Valance
1 3/4" Minimum
Inside Mount

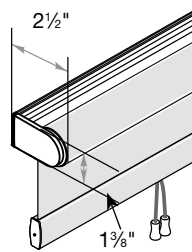

No Valance*
2" Minimum
Inside Mount

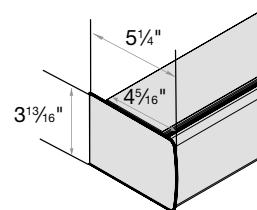

Contour Valance
3 1/2" Minimum
Inside Mount
(return can be trimmed)

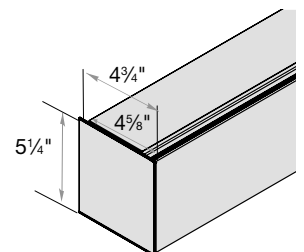

Flat Valance
2 15/16" Minimum Inside Mount
(return can be trimmed)


*Largest possible measurement given will vary per fabric and window dimensions.

March 2023


Size Considerations

EasyTouch Cordless Lift and EasyTouch Dual Lift: Mounting Depth Illustrations


The following diagrams illustrate the mounting depth requirements for shades mounted inside window casements.

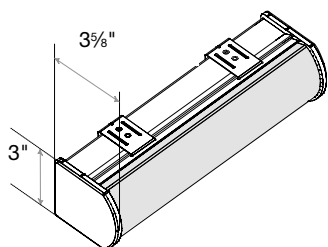


Small Cassette Valance
1 5/8" Minimum Inside Mount

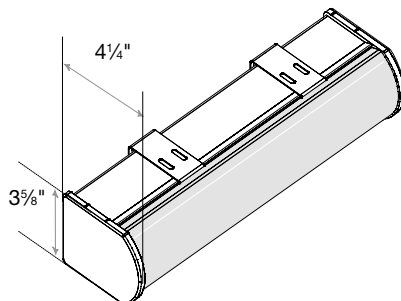


Medium Cassette Valance
1 3/4" Minimum Inside Mount

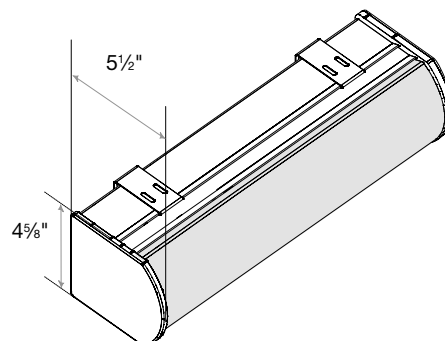


Large Cassette Valance
1 3/4" Minimum Inside Mount

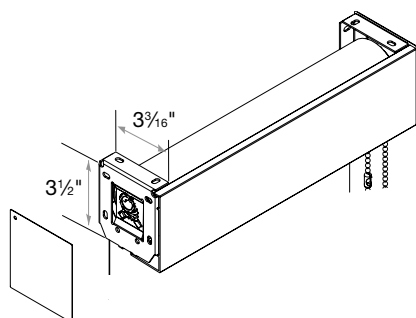


3" Fascia
2 3/4" Minimum Inside/Top Mount
3/4" Minimum Inside/Side Mount

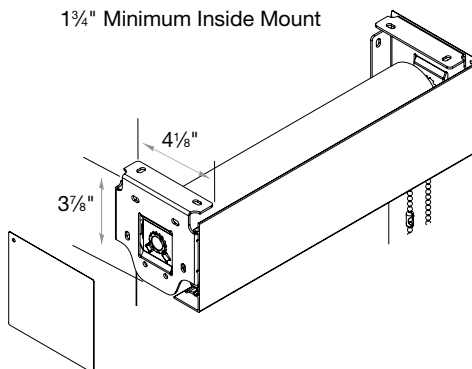


4" Fascia
3 3/4" Minimum Inside/Top Mount
1 1/2" Minimum Inside/Side Mount

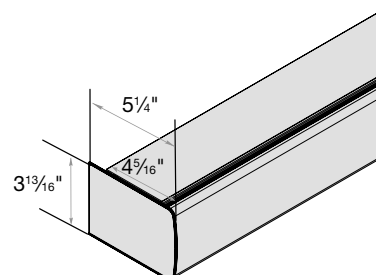


Contour Valance
3 1/2" Minimum Inside Mount
(return can be trimmed)

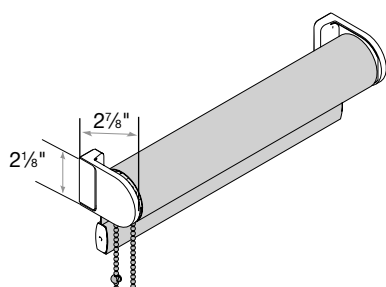


**1 5/8" Decorative Bracket
No Valance***
3/4" Minimum Inside/Side Mount

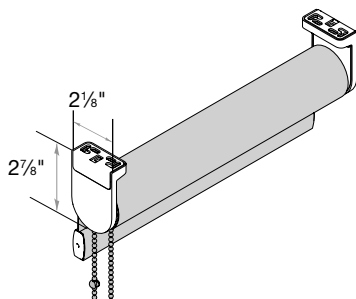


**1 5/8" Decorative Bracket
No Valance***
Minimum Inside/Top Mount is
equal to 1/2 the roll diameter, plus 1 1/2"

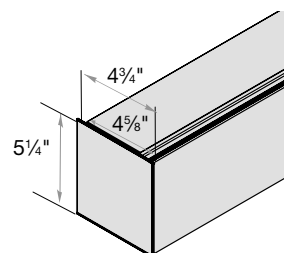

Flat Valance
2 15/16" Minimum Inside Mount
(return can be trimmed)

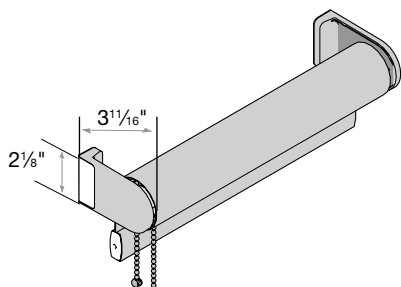

**2" Bracket
No Valance***
3/4" Minimum Inside/Side Mount

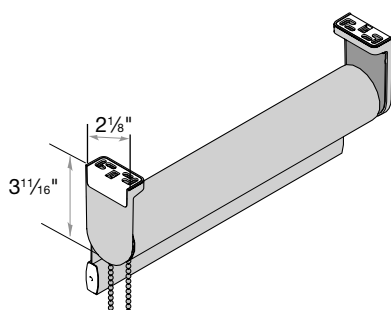

**2" Bracket
No Valance***
Minimum Inside/Top Mount is
equal to 1/2 the roll diameter, plus 1 1/2"

*Largest possible measurement given will vary per fabric and window dimensions.