

NO DRILL ROMAN SHADES | Cordless ver.


INSTALLATION INSTRUCTIONS

No Drill Roman Shade is a seamless, installation-free window treatment that fits directly into the window or door frame without drilling, screws, or plaster work.

Here is the installation guide:

1. Parts & Tool:

Parts contained in your order...

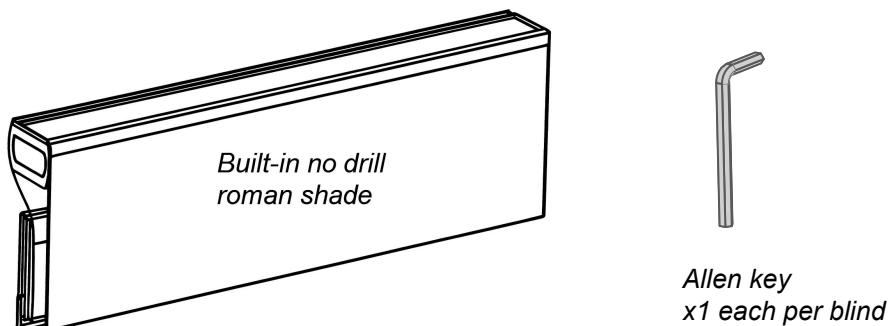

2. Installing the Blind

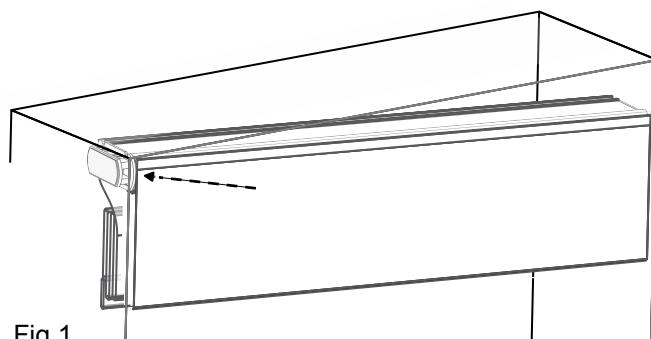


Fig.1


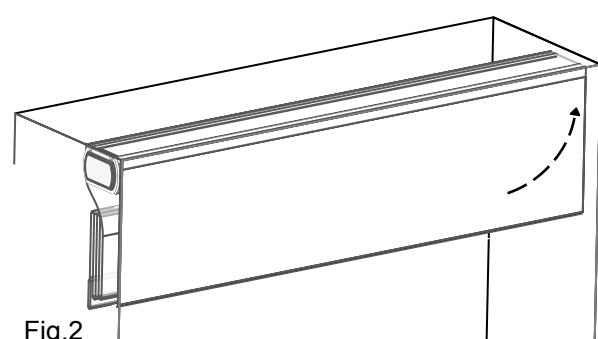



Fig.2

* Gently angle the blind into the recess and press the no-drill mechanism's push pad against the wall (Fig.1).

* Raise the opposite end, then adjust the blind until it is level (Fig.2).

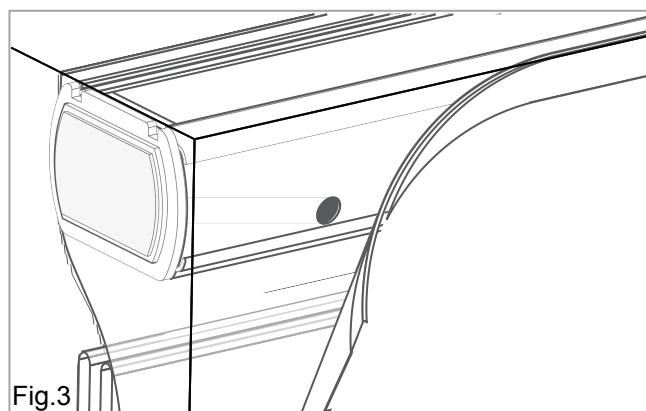


* On the no drills side of the blind (left side), peel away the front fabric to expose the tightening position in the headrail (Fig. 3).

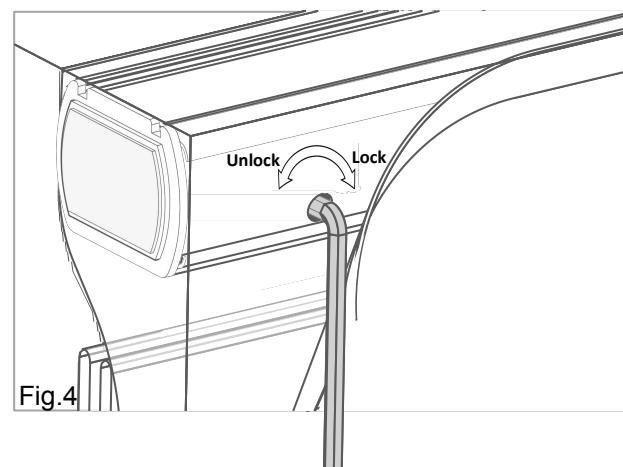

* Use the supplied Hex key to lock and unlock the mechanism (Fig.4). Turn the key clockwise to lock and counterclockwise to unlock until you hear the mechanism clicking sound.

NO DRILL ROMAN SHADES| Cordless ver.

3. Operating Shade

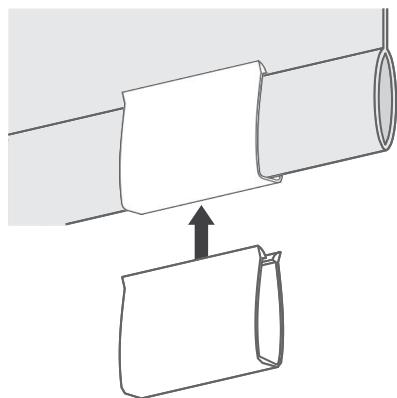

* Clear plastic tab-handles are provided to protect the fabric from gathering finger marks. Simply slot the handle onto the bottom-bar of the blind; ideally, there should be one fitted close to each end of the blind.

* Use both hands to raise and lower the shade, applying even force at both handles to maintain proper operation.

