


Arch Shade Installation Instructions

Perfect Arch

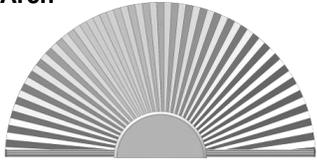

Step 1: Getting Started

Remove the shade from the package. Save the packaging until the shade is installed and working to your satisfaction.

Tools Needed:


- Power drill and drill bit
- Measuring tape
- Screwdriver
- Level
- Pencil



You will need to use the following fasteners for your particular mounting surface.

Surface	Fastener
Wood	#8x1 1/4" Screws (Provide) 
	#6x3/4" Screws (Provide) 
Drywall/Plaster	Wall Anchors, Expansion Bolts (Not Provide) 
Metal	Sheet Metal Screws (Not Provide) 


Check Component/Hardware:

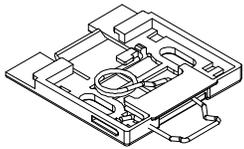

Installation Bracket



Bracket Clip




180°Center Template



180°Center Support


Step 2: Assemble the Shade

Open the shade and place the rail into the bottom of 180°center support tightly, and then install the front and back 180°center templates:

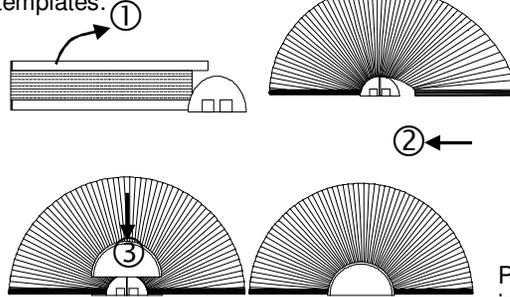


Step 3: Install the Bracket


Align the Installation Brackets and install them evenly. **Install the brackets close to the ends when the shade width is less than 23"**.

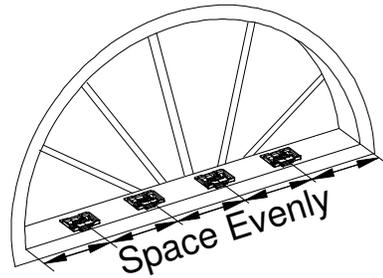


Use two #8x1 1/4" screws to attach the installation brackets on the window frame. The minimum distance is 11/16" from the front bracket to the edge of window frame.

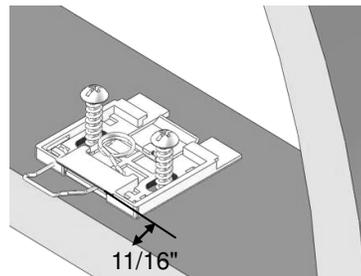


Step 4: Install the Shade

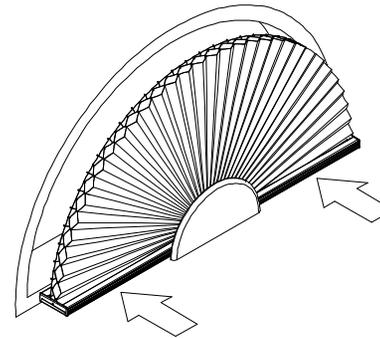


Place the front groove of the rail into the front iron wire of the bracket and then push forward to make the back groove of the rail snap into the back groove of the bracket.

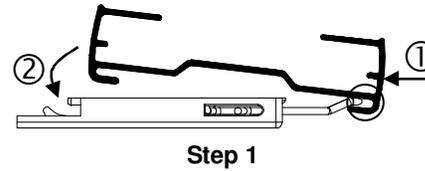


Insert the Bracket Clip into fabric and then close the Bracket Clip to keep it clamped on the fabric.

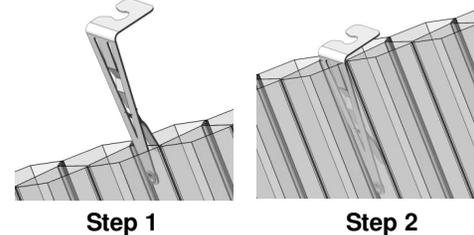


Bracket Clip open and close:

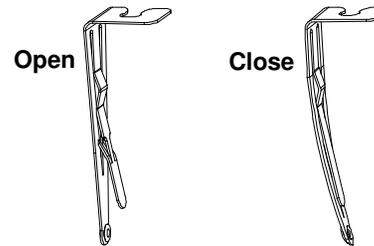

Install a #6x3/4" screw into the corresponding location, approximately 1 1/8" from the front. Do not drive the screw completely in and leave around 2mm gap to insert Bracket Clip)

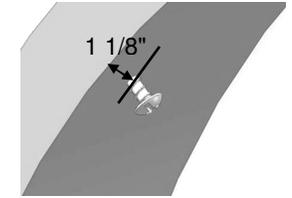


Insert the Bracket Clip into the screw from the notch.

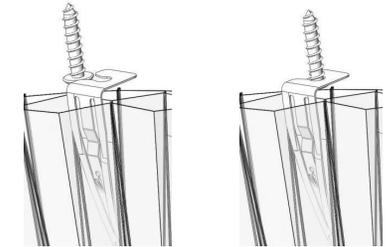

Remove the Shade

1. Remove the Bracket Clip from the screw.
2. Disengage the rail from the front and then lift the rail up from the back.

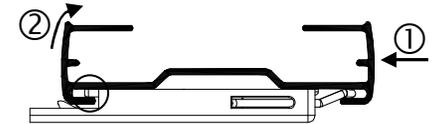

Cleaning

Routine cleaning will help maintain the beauty of your shade. The shade can be cleaned by using a soft brush, vacuumed with a low suction hand-held vacuum, cleaned ultrasonically (specify that a mild solution must be used and that the head rail should never be immersed in liquid), or dampen a clean cloth with a warm water and mild detergent solution to dab the spot until it's gone (do not rub!).