


Made To Measure Installation Instructions

To properly install your Light Blocker product, you must have a minimum of 3/4 inch sized, flat & clean surface. Tools you will need: tape measure, pencil or marker, heavy scissors/side cutters.

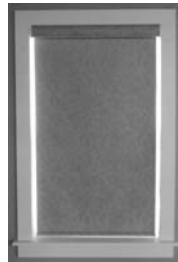


A) Lower the blind to rest on the window sill.



B) Before removing the liner from the taped side of your Light Blocker, determine if you will be mounting the product in front or behind the material. The difference is aesthetic or if the light is more effectively blocked with the product in front or behind the blind.



C) Make sure the Light Blocker is as close to the edges of the blind as possible without allowing the blind to rub against the Light Blocker. (If the blind is fitted with a control mechanism, ensure the Light Blocker does not interfere with the the blind's opening and closing.)

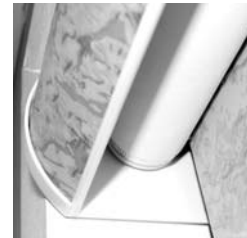

D) Using a marker or pencil, mark the desired mounting position of the soLar-bar on the window frame.



E) Once mounting location is determined, remove the liner from the taped surface of the Light Blocker and attach to the window frame.



F) If needed, Light Blocker can be trimmed with heavy scissors or side cutters.



This product may not be applicable for all window frame openings or window blinds.